
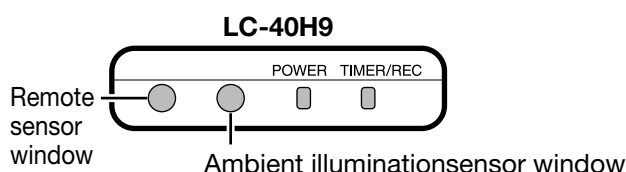


# English Guide



## Part Names

- The illustrations below are those of LC-32H9.


### Front view

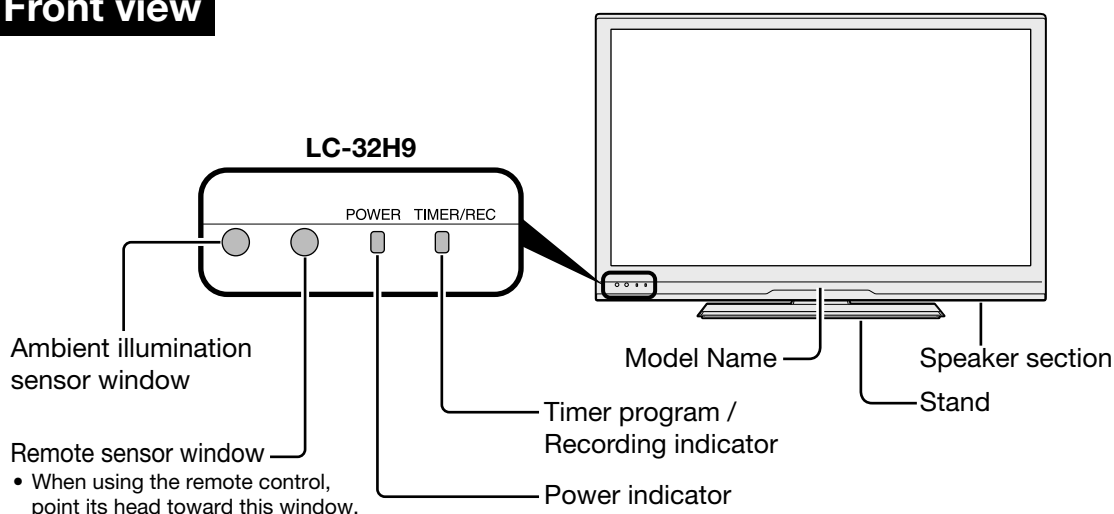


### Left side view

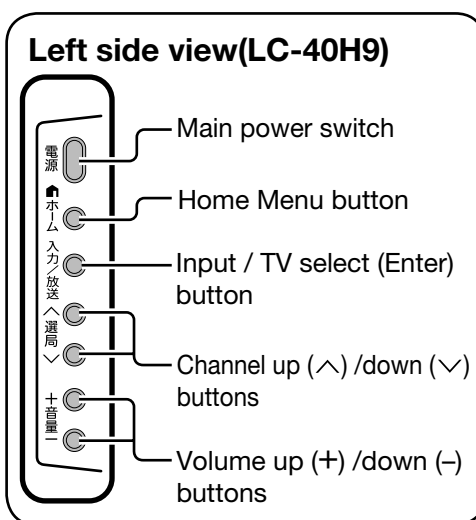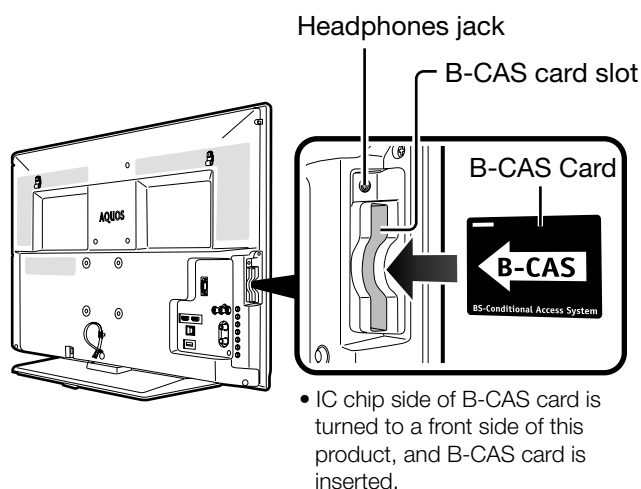

## Back view(LC-40H9)

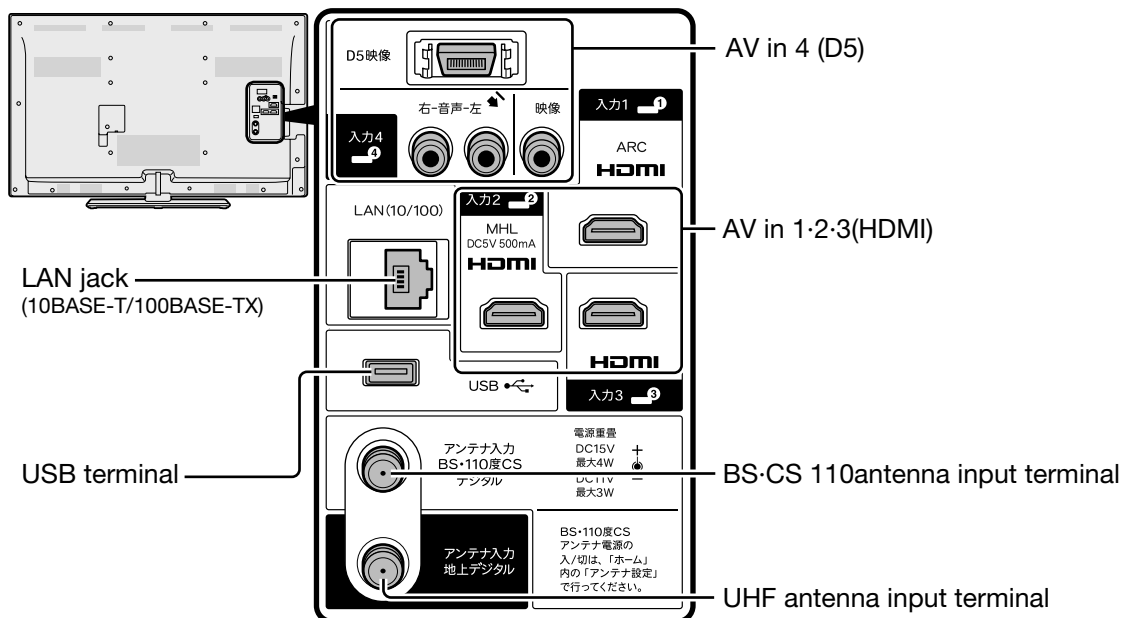

## Back view(LC-32H9)

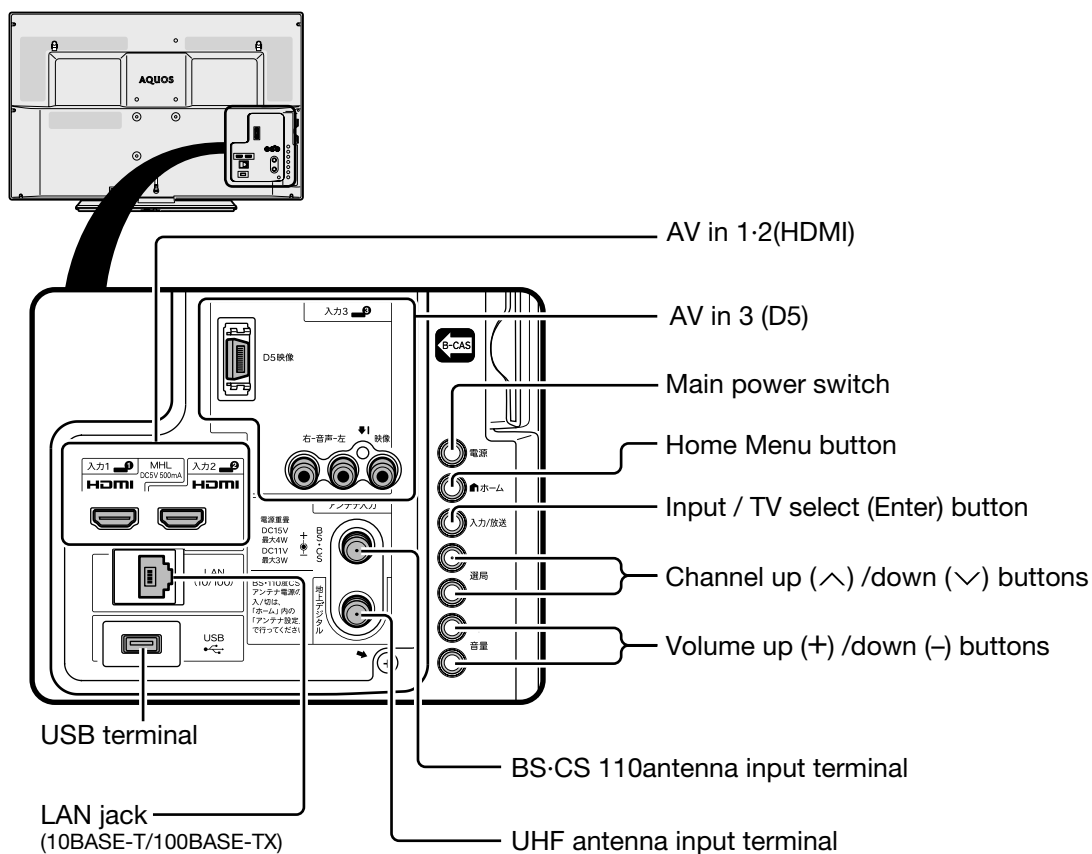

もくし／ご注意  
各部のなまえ

ふだんの  
使いかた

メニユー  
操作

双方向通信／  
USBメモリー

USB  
ハードディスク

ファミリンクで使う／  
レコーダーやパソコンをつなぐ

個別設定／  
放送の種類について

故障かな？／  
エラーメッセージ

お役立ち情報  
(仕様や素子)

English  
Guide

# Remote Control Unit

## Active/Standby

Press to engage the TV set in the active or standby mode.

**地上 Terrestrial digital select**  
**Terrestrial analog select**

**BS BS select**

**CS CS select**

データ運動

**d Linked data broadcast**

Press to call the data broadcast linked with the current digital TV program.

**Mute**

Press to mute audio.

**+ Volume up (+)/down (-)**  
Press to adjust the volume.

**番組表(予約) EPG**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

**ホーム Display the "Home" Menu**  
Press to start some useful operations of the TV.

番組情報

**Program info**

Press to display detailed information on the current digital program.

## Finish

Press to finish menu operation, etc.

録画消去

**Delete recording**

Press to delete a title recorded on the USB-HDD.

2画面

**Split screen**

Press to switch between the split screen mode and the normal screen mode.

操作切換

**Operable screen**

Press to switch the operable screen when the TV set is in the split screen mode.

**Freeze**

Press to freeze the picture.

3桁入力

**Digital channel number input**

Use to select a digital channel by entering the 3-digit channel number.

AVポジション

**AV position (Changing Pic. Quality) select**

(画面切換)

Press to select the picture/sound setting that best matches the current program.

映像切換

**Picture select**

Press to select the desired picture when watching a digital multi-picture program.

画面表示

**Display**

Press to display or turn off the channel call, etc.

## Familink

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

## SAVE mode

Press to change to the SAVE mode.

お知らせ

タイマー

**Timer**

Press to set timer.

## Channel select

- Press to select a channel.
- Use to input a number for various settings.

録画リスト

**Recording list**

- Press to display a list of programs recorded onto a USB HDD or AQUOS recorder.

入選

選局

**Channel up (^)/down (v)**

Press to select channels in the ascending or descending order.

入力切換

**Input select**

Press to select the input.

## Display the Tool Menu

## Cursor (up, down, left, right)

Use to select a menu item, column, etc.

## Enter/Confirm

Press to confirm a selected setting or menu item.

## Return

Press to go back to the previous screen.

青 赤 緑 黄

**Color**

Use to operate EPGs and data program screens.

## Familink

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

音声切換

**Audio select**

Press to select the audio.

時計

**Clock**

Press to display a large clock on the screen while watching.

字幕

**Caption**

Press to display, select, or turn off captions when watching a digital program with captions.

オフタイマー

**Sleep timer**

Press to select the remaining time period after which the TV set automatically enters the standby mode.

## To open the cover

Hold the cover by the projections on both sides and lift upwards.

# Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



# 1

Press  
ホーム  
and  
select  
with



Select “設定” (Setup) on  
the Home menu.

ホームメニューから「設定」  
を選ぶ



# 2

Select  
with



Select “ (視聴準備)”  
(View Setting).

「 (視聴準備)」を選ぶ



# 3

Select  
with



Press



Select “Language(言語)”.  
「Language(言語)」を選ぶ



# 4

Select  
with



Press



Select “English”.  
「English」を選ぶ

Enter.  
決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

# 5

Press



Finish this operation.  
終了する

◇おしらせ◇  
誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

もくじ／ご注意  
各部のなまえ

使いた  
ふだん  
かた

メ  
ン  
ー  
操  
作

双  
方  
向  
通  
信  
／  
U  
S  
B  
メ  
モ  
リ

U  
S  
B  
ハ  
ー  
ド  
デ  
ィ  
ス  
ク

フ  
ァ  
ミ  
リ  
ン  
ク  
で  
使  
う  
／  
レ  
コ  
ー  
ダ  
ー  
や  
パ  
ソ  
コ  
ン  
を  
つ  
な  
ぐ

個  
別  
設  
定  
／  
放  
送  
の  
種  
類  
に  
つ  
い  
て

故  
障  
か  
な  
？  
エ  
ラ  
ー  
メ  
ッ  
セ  
ー  
ジ

お  
役  
立  
ち  
情  
報  
（  
仕  
様  
や  
索  
引  
）

English  
Guide